


**SHIELD C78
Rev. 1.3**

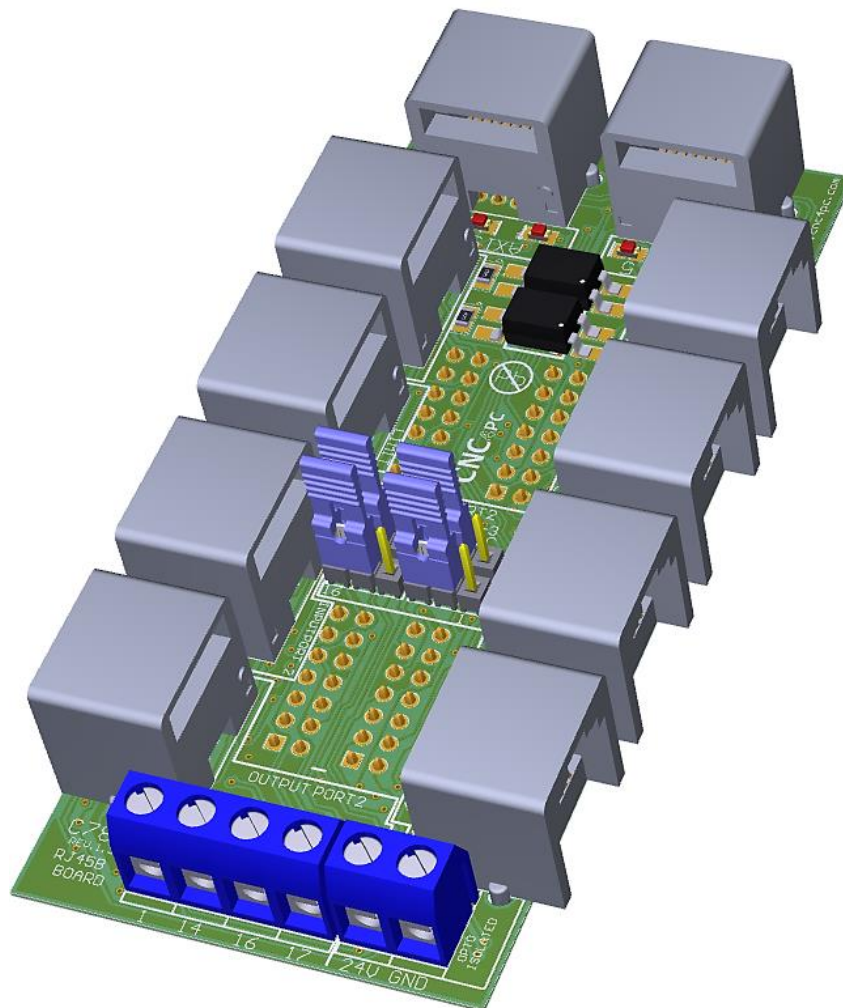

SEPTEMBER, 2018

USER'S MANUAL

TABLE OF CONTENTS

<u>Contents</u>	<u>Page #</u>
1. <i>OVERVIEW</i>	1
2. <i>FEATURES</i>	1
3. <i>BOARD DESCRIPTION</i>	2
4. <i>TERMINALS</i>	3
4.1 Outputs terminal TTL or Open Collector.	3
4.2 Wiring for Open Collector	3
4.3 Input terminal optoisolated	4
5. <i>SELECT OUTPUT PORT_2</i>	4
6. <i>PINOUT</i>	5
7. <i>DIMENSIONS</i>	6


1. OVERVIEW

This shield board is used for connection C76, M16D and C82.
It has encoder, limits, port_1 input, signal TTL or Open Collector port_2 output and connection for axes.

2. FEATURES


- RJ45 connector for Axes.
- RJ45 connector for encoder.
- RJ45 connector for limit.
- RJ45 connector for input port_2.
- Select jumper.
- Input terminal optoisolated.

3. BOARD DESCRIPTION

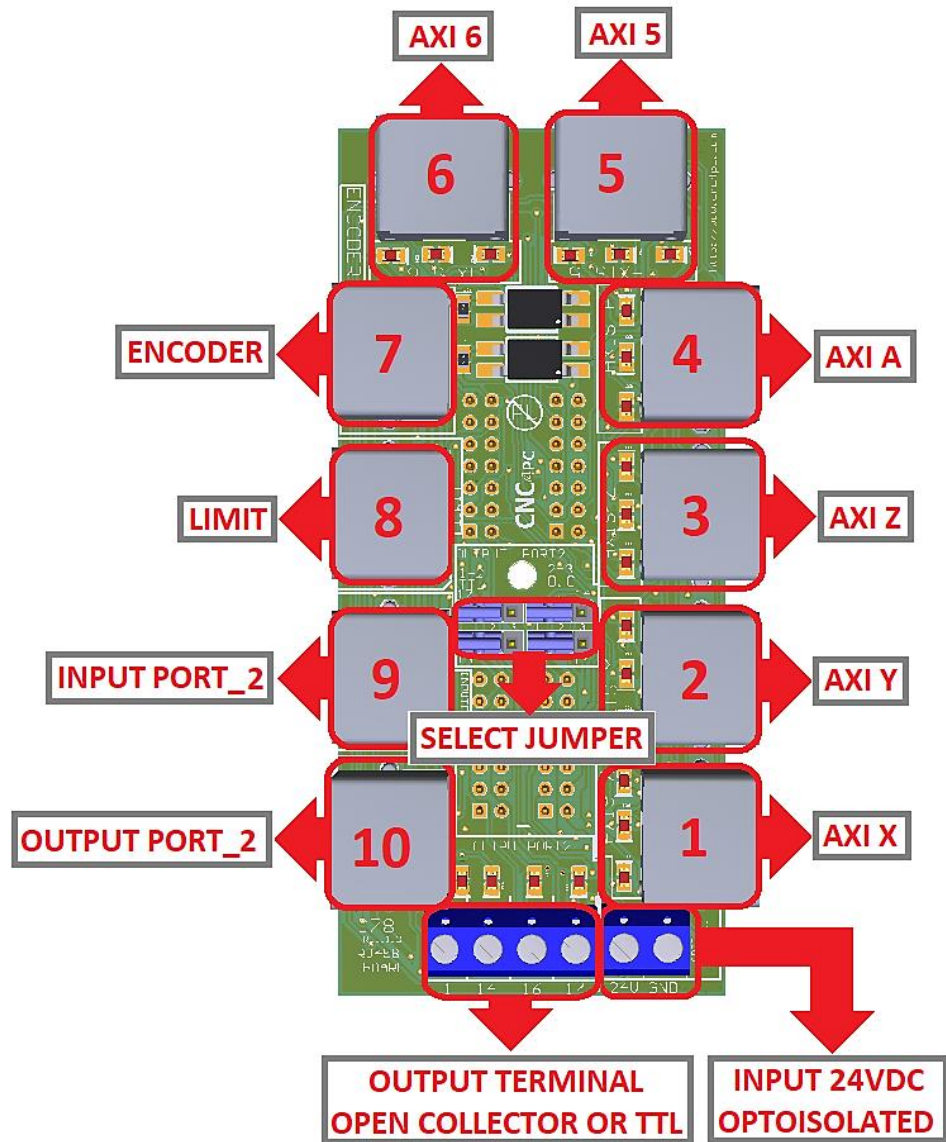


4. TERMINALS


4.1 Outputs terminal TTL or Open Collector.

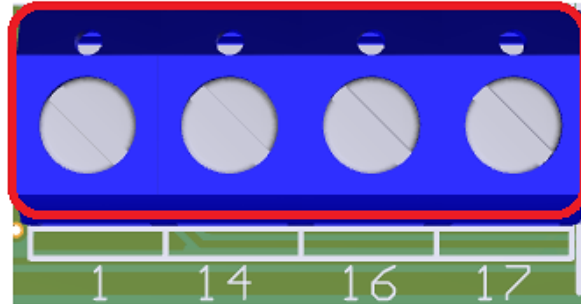

4.2 Wiring for Open Collector

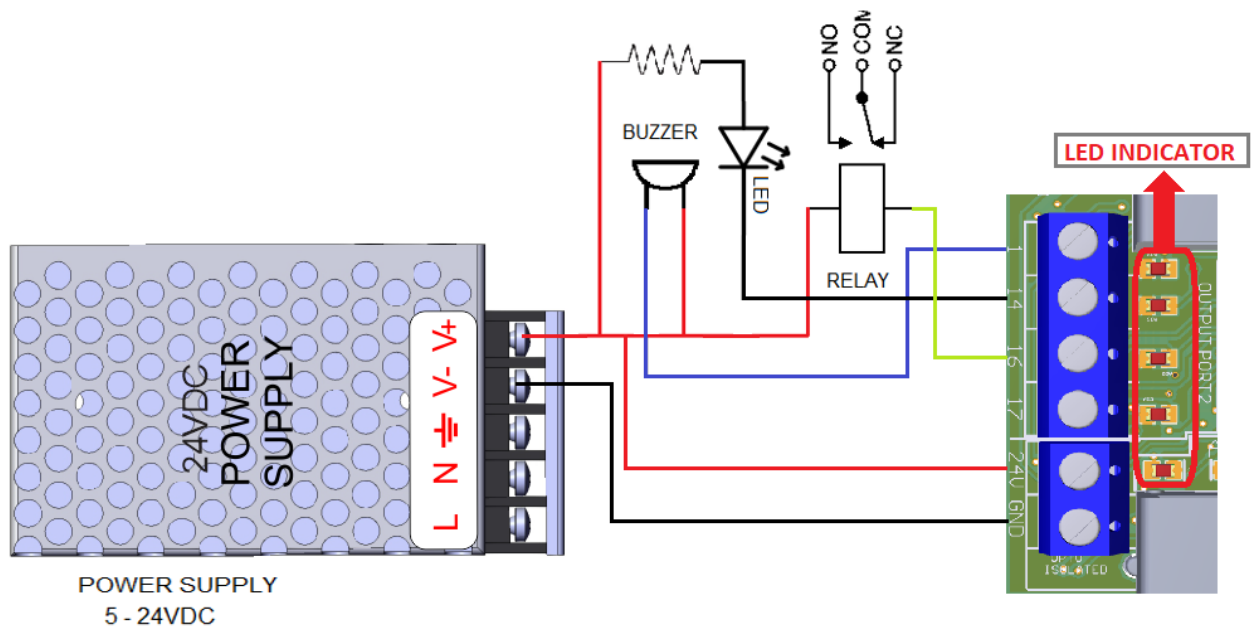


4.3 Input terminal optoisolated

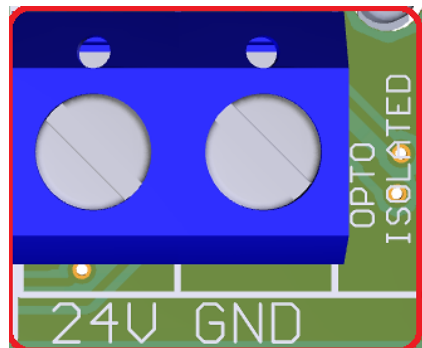


5. SELECT OUTPUT PORT_2

Set jumper to use outputs as +5VDC TTL or Open Collector 1, 14, 16, 17

1-2: TTL

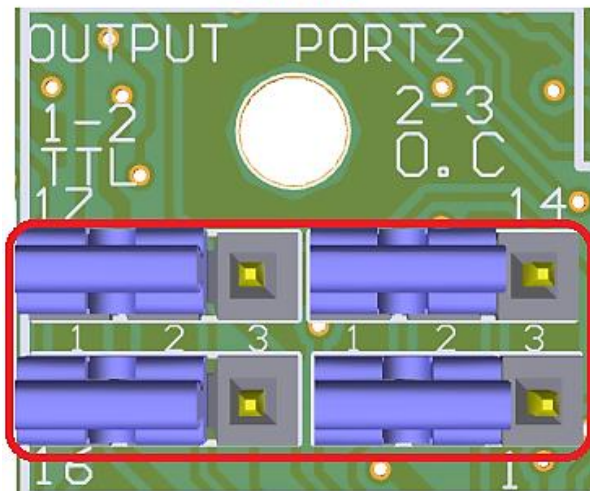

2-3: OPEN COLLECTOR

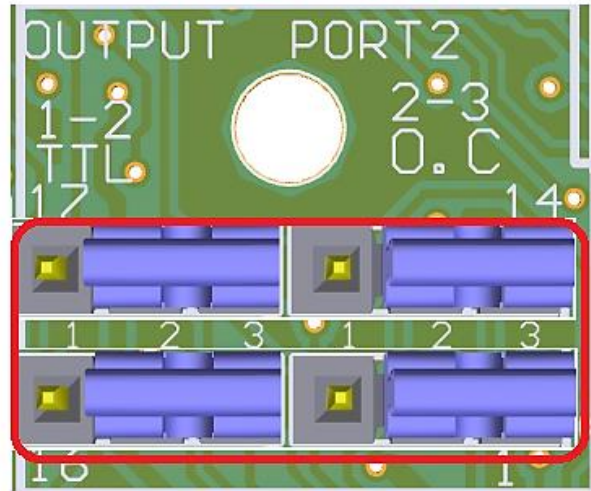

6. PINOUT



ENCODER

LIMIT

INPUT PORT_2

OUTPUT PORT_2

RJ45_7		RJ45_8		RJ45_9		RJ45_10	
RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN
1	GND	1	GND	1	GND	1	GND
2	5VDC	2	1_13	2	NC	2	2_17
3	NC	3	1_12	3	NC	3	2_16
4	2_4(INDEX)	4	1_11	4	2_11	4	2_1
5	NC	5	1_15	5	1_15	5	2_14
6	2_2(enc. A)	6	2_11	6	NC	6	NC
7	NC	7	12/24VDC	7	12/24VDC	7	5VDC
8	2_3(enc. B)	8	NC	8	5VDC	8	12/24VDC



AXI X

AXI Y

AXI Z


AXI A

AXI 5

AXI 6

RJ45_1		RJ45_2		RJ45_3		RJ45_4		RJ45_5		RJ45_6	
RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN	RJ45 PIN	P.P. PIN
1	NC	1	NC	1	NC	1	NC	1	NC	1	NC
2	1_2(Step X)	2	1_4(Step Y)	2	1_6(Step Z)	2	1_8(Step A)	2	1_1(Step 5)	2	1_14(Step 6)
3	NC	3	NC	3	NC	3	NC	3	NC	3	NC
4	GND	4	GND	4	GND	4	GND	4	GND	4	GND
5	Error/res X	5	Error/res Y	5	Error/res Z	5	Error/res A	5	Error/res 5	5	Error/res 6
6	1_3(Dir X)	6	1_5(Dir Y)	6	1_7(Dir Z)	6	1_9(Dir A)	6	1_17(Dir 5)	6	1_16(Dir 6)
7	12/24VDC	7	12/24VDC	7	12/24VDC	7	12/24VDC	7	12/24VDC	7	12/24VDC
8	5VDC	8	5VDC	8	5VDC	8	5VDC	8	5VDC	8	5VDC

7. DIMENSIONS

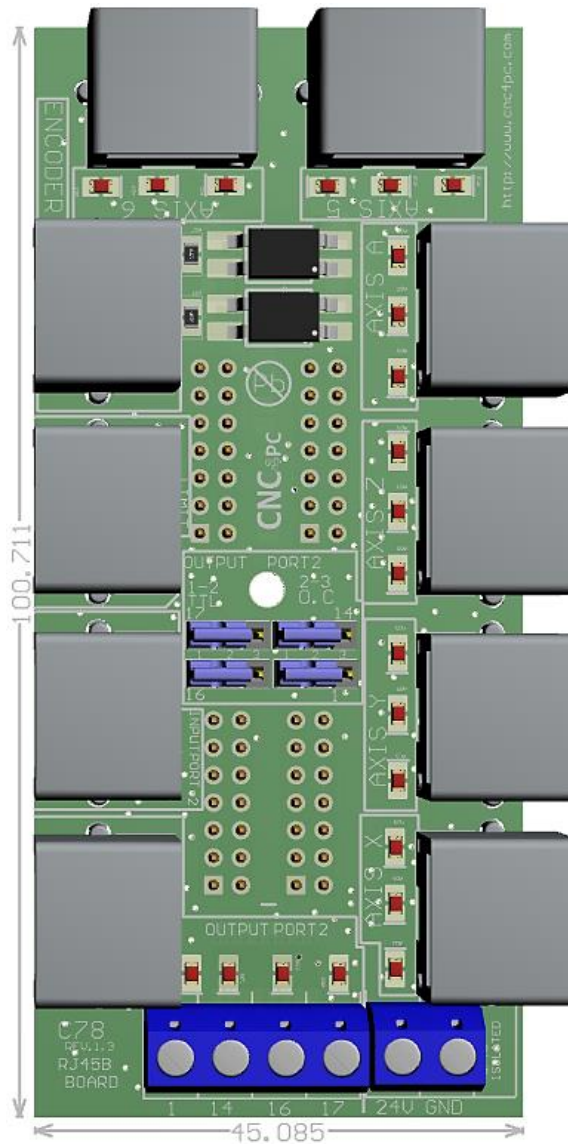

DISCLAIMER

Use caution. CNC machines can be dangerous machines. Neither DUNCAN USA, LLC nor Arturo Duncan are liable for any accidents resulting from the improper use of these devices. This product is not a fail-safe device and it should not be used in life support systems or in other devices where its failure or possible erratic operation could cause property damage, bodily injury or loss of life.